

VIBRATING EGG SEVEN CREATIONS ULTRA SEVEN BULLET



User manual

CONTROL

- 1) Unscrew the cap and insert the batteries according to the poles.
- 2) Short presses on the top button to turn it on and add intensity.
- 3) Short presses of the bottom button reduce the vibration strength again until it turns off.

MAINTENANCE

After each use, rinse the egg with lukewarm water and soapy detergent.

You can also use an [erotic cleaner](#), which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The egg is **water resistant**, so maintenance is very easy.

Water resistant means that splashing water will fall on it, but you **MUST NOT submerge it in water!**

You could only immerse the product in water if it was **waterproof**.

LUBRICATION

Due to the material of the vibrator, you can use [lubricants of any base](#).

DRIVE AND CHARGING

The egg is powered by two AA batteries. For greater endurance, we recommend using alkaline or rechargeable batteries.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

Vibrating egg with remote control.